

MASTER'S GUIDE

Vessel Traffic Services

The provisions on vessel traffic services are laid down in the Vessel Traffic Service Act 623/2005 and in the Government Decrees on Vessel Traffic Service 763/2005, 1798/2009, 1304/2011 and 1216/2018.

PARTICIPATION IN VESSEL TRAFFIC SERVICES

Vessels of 24 metres in length overall or more are obliged to participate in the vessel traffic services.

When navigating in the VTS area, vessels are required to maintain a continuous listening watch on the working channel used in the area. Furthermore, vessels are obliged to obey the rules relevant to the traffic in the VTS area. More detailed instructions about the required reports and working channels can be found in the regional VTS guide.

Vessels navigating in the VTS area, which are not obliged to participate in the vessel traffic services, are recommended to maintain a listening watch on the working channel in the VTS area or sector in question.

OPERATIONAL HOURS AND LOCATION OF VTS CENTRES

In Finland the vessel traffic services (VTS services) are operated by Fintraffic Vessel Traffic Services Ltd (Fintraffic VTS). VTS centres are located in Turku and Helsinki.

The sea areas at the Finnish coast are divided into six VTS areas. These are Bothnia VTS, West Coast VTS, Archipelago VTS, Hanko VTS, Helsinki VTS and Kotka VTS. In addition, Saimaa VTS operates in the Saimaa deep water fairway.

Along the coast VTS services are provided 24 h/day throughout the year. There may be operational interruptions due to technical problems or an unexpected shortage of personnel. Information about the interruptions is given as navigational or local warnings. Saimaa VTS only provides services during its period of operations. The period of operations is largely equivalent to the opening hours of the Saimaa Canal, but Fintraffic VTS will provide information about when the operational period begins and ends.

SERVICES PROVIDED BY THE VTS CENTRES

Vessel traffic services include information, navigational assistance and traffic organization.

VTS Areas along the coast provide all three service levels as described below. Saimaa VTS provides the service Information.

To improve safety and to create a consistent maritime situational awareness, English is used as the primary communication language in the VTS areas along the Finnish coast. As required, vessel traffic services are provided also in Finnish, Swedish and English.

Information is given to all vessels whenever necessary, at set intervals, when they report or when a vessel so requests. The information to vessels comprises matters which affect the vessels' safe and smooth navigation. Examples of such information are other vessels in the VTS area, circumstances as well as the condition of the aids to navigation and fairways. The VTS monitors the vessel movements and when necessary informs vessels about any dangers threatening them. The service Information is provided in all fairway sections in VTS Areas.

Navigational assistance can be given to identified vessels on request or when deemed necessary by the VTS. Navigational assistance is only advisory and normative; the master of the vessel is still responsible for the manoeuvring of the vessel. Navigational assistance may include information about the vessel's position and bearings/courses over ground to for example the fairway centre line or the pilot boarding place. Bearings or COG's can also be given so that vessels can pass navigational hazards, for example shoals, at a safe distance. The information provided is based on the data received from the radar or the AIS system used in the VTS centre. Navigational assistance is provided in the VTS areas along the coast at open sea, from the open sea to the vicinity of pilot boarding places and outer anchorages.

Vessel traffic is organized in order to improve traffic flow and safety. To organize traffic, there are areas within the VTS areas with permanent meeting and overtaking prohibition. In addition, traffic can be separated in the permanent overtaking and meeting prohibition areas as well as near the pilot boarding places, considering the traffic situation and weather conditions. The aim is to prevent dangerous meeting and overtaking situations and congestion.

The services provided in the different VTS areas are described in the regional part of the Master's Guide.

INCIDENTS

In exceptional situations, such as extraordinary weather conditions, search and rescue situations or any other incidents in which vessel traffic is restricted or put at risk, the VTS can temporarily close a fairway or fairway section, issue speed limits or instruct vessels to anchor.

Vessels must immediately report all incidents relating to maritime safety to the VTS centre. Vessels involved in an accident or in imminent danger at sea should first contact the MRCC (tel. +358 294 1000). In the Lake Saimaa region, vessels should contact the emergency response centre (tel. 112) or the VTS centre.

THE MASTER OF THE VESSEL – RESPONSIBILITY AND OBLIGATION TO REPORT

The vessel's participation in the vessel traffic services does not affect the master's responsibility for manoeuvring the vessel. If the master of the vessel, for a valid reason relating to the vessel's safety, is unable to participate in the vessel traffic services, or to follow the instructions given by the VTS in exceptional situations, he must immediately inform the VTS about this.

The master must notify the VTS of the following events taking place in the VTS area or its vicinity:

- any incidents or accidents affecting the safety of the vessel, such as collisions, grounding, damage, malfunction or breakdown, flooding or shifting of cargo, any defects in the hull or structural failure
- any incidents or casualties affecting the safety of the vessel, such as failures likely to affect the vessel's manoeuvrability or seaworthiness, or any defects affecting the propulsion system or steering gear, the electrical power generating system, navigation equipment or communications equipment

1.9.2023

Hanko VTS

- any circumstances liable to cause pollution of the waters or shore, such as the discharge or threat of discharge of polluting materials into the sea
- any slick of polluting materials and containers or packages seen drifting at sea

When vessels agree on matters concerning traffic situation, they shall discuss it on the VTS channel.

REQUEST FOR ACCESS TO VTS RECORDS

The traffic image of the VTS area and the related VHF radio communication is saved in the VTS centres. The records are stored for at least 30 days.

Access to records is priced on commercial grounds. Access to records for use by authorities is free of charge. Provisions on the conditions for access have been laid down in the Act on the Openness of Government Activities (621/1999).

PILOTAGE

The vessel shall use a pilot in the Finnish pilotage area, unless otherwise provided by the VTS fairway-specific limitation on the obligation to use a pilot or the vessel's cargo. The Finnish Transport and Communications Agency's regulation TRAFICOM/452299/03.04.01.00/2022 lays down provisions on the obligation to use a pilot and the related procedures in Finnish waters.

The vessel shall give the Pilot Dispatch Centre an advance notification of the need for pilotage at least 24 hours and 12 hours before arriving at the pilot boarding position and at least 12 hours and 6 hours before leaving the port. The advance notification shall include information on, for example, the need for pilotage, the technical characteristics of the vessel, the draught of the vessel at the beginning of pilotage, any technical deficiencies affecting pilotage, and other deficiencies that affect the safety of the pilot or pilotage negatively. The information will be submitted to Finnpiilot, which will forward the information to VTS. For more details on the advance notification, please visit Finnpiilot at <https://finnpilot.fi/en/for-customers/service-terms-for-pilotage/>.

If a vessel has been granted a Pilot Exemption Certificate or it has been granted exemption from compulsory pilotage, the master of the vessel shall, upon entry into a VTS area, report the number of the exemption to the VTS centre. This report can also be submitted in advance. An advance notice can be made for several voyages at the same time.

Pilotage order

Finnpiilot Pilotage Ltd is responsible for the pilotage in Finland. Pilot orders shall be submitted to Finnpiilot's Pilot Dispatch Centre.

Hanko-Helsinki Pilot Dispatch Area (Hanko, Porkkala and Helsinki)

Internet: <https://finnpilot.fi/en/for-customers/pilot-dispatch/>

Email: pilotdispatch.hankohelsinki@finnpilot.fi

Tel: +358 (0) 29 525 3420

ANCHORING

A vessel must always notify both the VTS and the Finnish Border Guard when anchoring in Finland's territorial waters. The vessel must make the notification either itself or through its agent. In addition, a vessel anchoring in territorial waters is required to make an electronic customs declaration, even if the vessel is not going to call at a Finnish port.

After leaving a port in Finland, the vessel must also check with the Finnish Border Guard whether anchoring in Finnish territorial waters is possible. Also in this case, a vessel remaining at anchor must make an electronic customs declaration.

WINTER NAVIGATION 1.11.-31.5.

The Finnish Transport Infrastructure Agency publishes instruction "Finland's winter navigation" every year on its website <https://vayla.fi/en/transport-network/waterways/winter-navigation>. Information about new instructions will be given in a press release.

All vessels arriving for the first time of the icebreaking season to a Finnish or Swedish assistance area will be asked the following question:

"Will you commit to compliance with the general instructions on icebreaker assistance published by the national maritime authorities?"

The answer to the question is "yes" or "no". The answer "yes" entitles icebreaker assistance and does not incur any expenses for the vessel. The answer "no" will affect the provision of future icebreaker assistance to Finnish ports.

The vessel or the shipping company can send the answer in advance by e-mail to Turku Radio (turku.radio@fintraffic.fi) which forwards the information to authorities. Shipping companies can send a combined answer in advance for all their vessels operating in the area.

Vessels are requested to report observations of ice accretion to the Finnish Meteorological Institute primarily by filling in the form on the website <https://virpo.fmi.fi/reports/> or by email to Turku Radio.

BALTIC SEA WASTE FEE

In the Baltic Sea region, a waste fee is always charged from vessels during port visits. MARPOL I, IV and V waste may be left at ports without an additional fee, as the obligatory waste fee also covers the reception of these types of waste. Delivering this waste at port is highly recommended, as the Baltic Sea is classified as a Particularly Sensitive Sea Area. Vessels should notify the port of their waste at least 24 hours before arriving at the port or, if the journey will take less than 24 hours, no later than when leaving the previous port. More information is in the Baltic Sea Waste Fee brochure, which can be found on Fintraffic VTS's website at <https://www.fintraffic.fi/en/vts/masters-guide>.

NEW DEPTH REFERENCE LEVEL N2000 (BSCD2000) FOR CHARTS

Finnish nautical charts and fairways are currently in the process of switching over to a new harmonized reference level for depth information that is tied to the national N2000 height system. The current reference level for depth information in sea areas is based on mean water level, and it will be replaced with a reference

level that is tied to the N2000 vertical coordinate reference system. The migration to the new depth information reference level will affect the depth and fairway information presented on nautical charts.

More information on the website <https://www.traficom.fi/en/services/sailing-directions-finnish-waters>.

THE NOTICE OF CHANNEL USE

Use of channels that deviates from the channel design refers to a situation where a vessel uses a channel in a manner that deviates from the channel's design and the adequacy of the channel space cannot be ensured based on the design. If the vessel's static draught is greater than the channel's design draught taking into account the current water level, the vessel shall ensure that her net under keel clearance remains adequate and demonstrate it to the VTS Centre that is responsible for monitoring the fairway.

Vessel's operator, agent or master shall give the notice of channel use at least 24 hours before its arrival at the pilot boarding position, or if the vessel is expected to arrive in less than 24 hours, no later than when the vessel has left the port of departure for a Finnish port. A vessel departing a Finnish port shall give the notice of channel use as soon as possible, at latest when the departure report is given.

The notice of channel use shall include the following items:

- A. Vessel's name
- B. Which channel or part of channel the vessel is intending to use in a manner that deviates from the channel design
- C. What is the manner that deviates from the channel design
- D. Length between perpendiculars LBP and Breadth
- E. Static Draught
- F. Centre of Buoyancy, KB
- G. Centre of Gravity, KG
- H. Metacentric Height, GM
- I. Block Coefficient, C_b

When ensuring the adequate net UKC and giving the notice of channel use, it is recommended to utilize the tools provided by the Finnish Transport and Infrastructure Agency (<https://vayla.fi/en/service-providers/merchant-shipping/navigating>). The notice of channel use can be given in the form of a squat calculation made with the Squat Calculator with regard to items D–I. The calculation can be shared as a link, or as a pdf-printout sent by e-mail to the VTS Centre. When using the Squat Calculator, it is enough to write the information of points A–C in the e-mail.

In Hanko VTS, Helsinki VTS and Kotka VTS monitoring areas the notice of channel use should be sent to the email address supervisors.hki@fintraffic.fi. Title the email "Notice of channel use".

The channel descriptions including depth and design data with general notes on usage of the main approach channels are published in Sailing Directions for Finnish waters published by Finnish Transport and Communications Agency (<https://www.traficom.fi/en/services/sailing-directions-finnish-waters>).

Hanko VTS

VTS AREA

The VTS Area covers the areas around Hankoniemi including the merchant shipping lanes in the area between Fläckgrund and Jussarö as well as the areas administered by the Port of Hanko. The VTS Area does not cover the areas administered by other ports.

Coordinates of the sector's corner points:

1. 59°55.0'N, 022°53.0'E
2. 59°52.4'N, 022°50.2'E
3. 59°40.5'N, 022°50.2'E
4. 59°40.5'N, 023°22.3'E
5. 59°42.0'N, 023°33.0'E
6. 59°52.1'N, 023°33.0'E

The services provided by the VTS centres are described in more detail in the general description of the Vessel Traffic Services.

REPORTING PROCEDURES

The working channel of Hanko VTS is VHF 67.

Reports should include the following information:

- Name of the vessel
- Name of reporting point
- Destination
- Intended route. If an alternative route is selected, this must be reported.

Required reports

- upon entry into the VTS Area
- before anchoring
- before leaving an anchorage
- after berthing
- before leaving port
- at the reporting points in the area:
 - Westbound vessels coming from the direction of Barösund must report 20 mins before passing the Koverhar fairway (Nyberskan).
 - Eastbound vessels shall report 20 minutes before passing Fläckgrund light to Hanko VTS on VHF channel 67.
 - Westbound vessels shall report 20 minutes before passing Fläckgrund light to Archipelago VTS on VHF channel 71.

AREAS WHERE MEETING AND OVERTAKING IS PROHIBITED

Meeting and overtaking is permanently prohibited in the following area covered by Hanko VTS:

1. Smörsten–Norra Klippingen, between latitudes 59°49.3'N and 59°50.0'N in the 9.0 m fairway.

OTHER REMARKABLE

Upon request, VTS can adjust the brightness of aids to navigation in the Port of Hanko.


CONTACT INFORMATION

Gulf of Finland Vessel Traffic Centre

Telephone: +358 20 448 5388 (all phone calls will be recorded)
E-mail: hanko.vts@fintraffic.fi
VHF: ch. 67

Supervisor
Telephone: +358 20 448 5391 (all phone calls will be recorded)
E-mail: supervisors.hki@fintraffic.fi

Hanko VTS

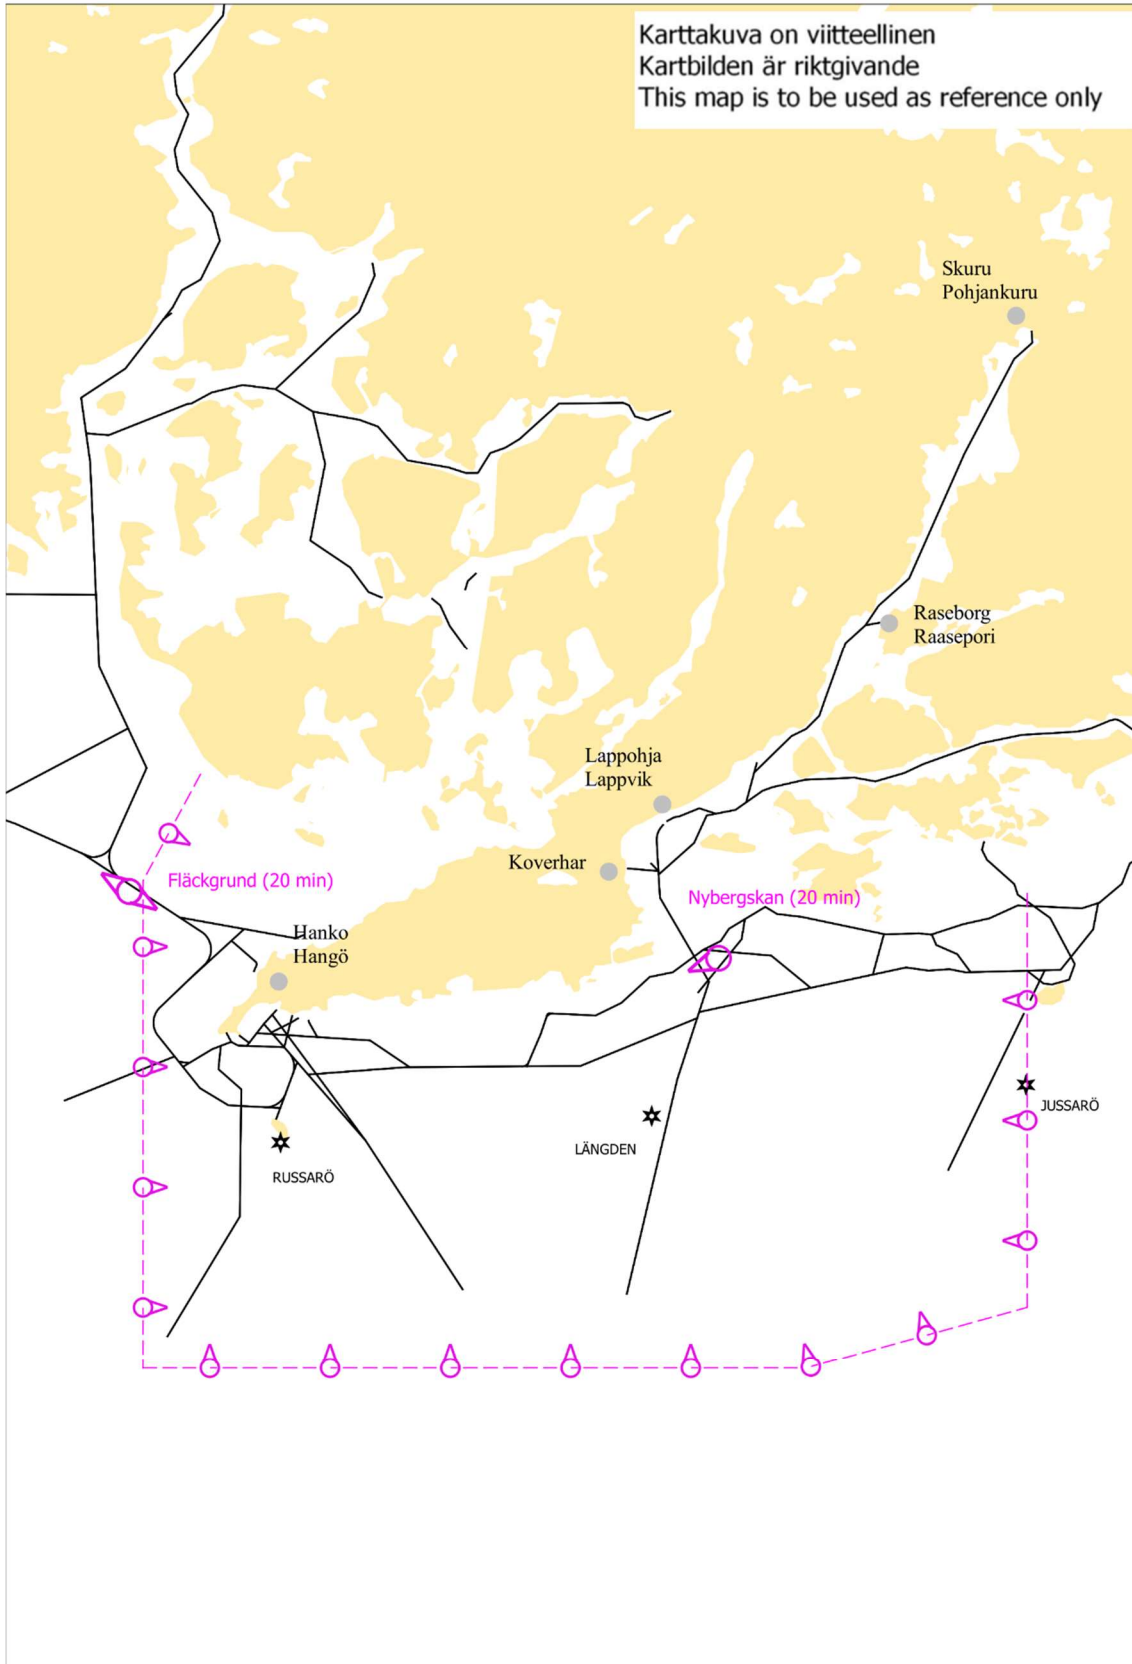

UPDATES

Date	Changes
25.11.2020	Instructions for winter navigation
07.01.2021	Company's logo, name and e-mail addresses changed
17.03.2021	A new text about anchoring. A new link to winter navigation's website.
22.06.2021	Information about Baltic Sea Waste Fee. When vessels agree on matters concerning traffic situation, they shall discuss it on the VTS channel.
12.08.2021	Some clarifications of the VTS Area.
16.03.2022	Upon request, VTS can adjust the brightness of aids to navigation in the Port of Hanko.
31.03.2022	Information about new depth reference level N2000 for charts.
01.11.2022	A request to report observations of ice accretion to the Finnish Meteorological Institute.
16.01.2023	Contact information to Pilot Dispatch Centre updated. All phone calls to VTS will be recorded.
05.06.2023	A new instruction: the notice of channel use. Removed mentioning of a VTS centre in Lappeenranta.
01.09.2023	Changes in chapter "Pilotage" according to a new Pilotage Act.